

## RO Pure

Establish position for the single Filter tap on the sink , drill 10 mm hole, install filter tap.

Install the T-line diverter valve into the cold water line.

Install the RO Pure Filters and the Alka Spring in line as shown in below diagram and connect with Single Filter tap.

A Wall bracket is provided for mounting of the Alka Spring cartridge to the cupboard wall.

Install pressure reducing valve.

**Working Pressure: 15 - 55/60 PSI**

**Please note:** The pressure reducing valve needs to be installed for higher water pressures than 55PSI.

Working Temperature: 5 - 40°C

### **Connecting and dis-connecting tubing:**


To connect: Push tubing approx ~ 20 mm into the connector.

To remove: Hold the O-ring back and pull tubing out of connector.

**Waterflow speed:** Tune T-line valve so water flow is approx 2 l/min

### **Flushing of system:**

Flush whole system for 5 minutes, then it is ready for consumption.

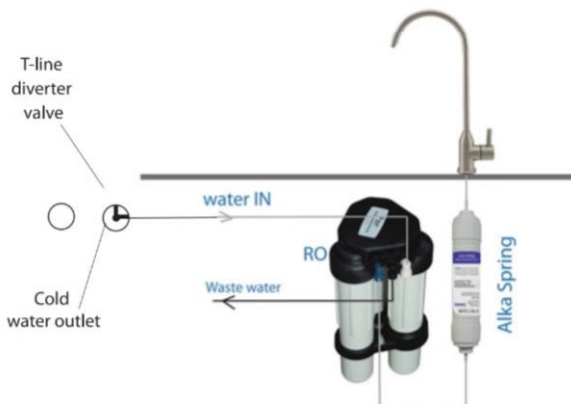

Please note: Professional installation is recommended.  
Ionza is not responsible for any damage resulting from incorrect installation.